


RISC, CISC, and ISA Variations

CS 3410


Computer System Organization & Programming



Big Picture: How to Design Program a Processor

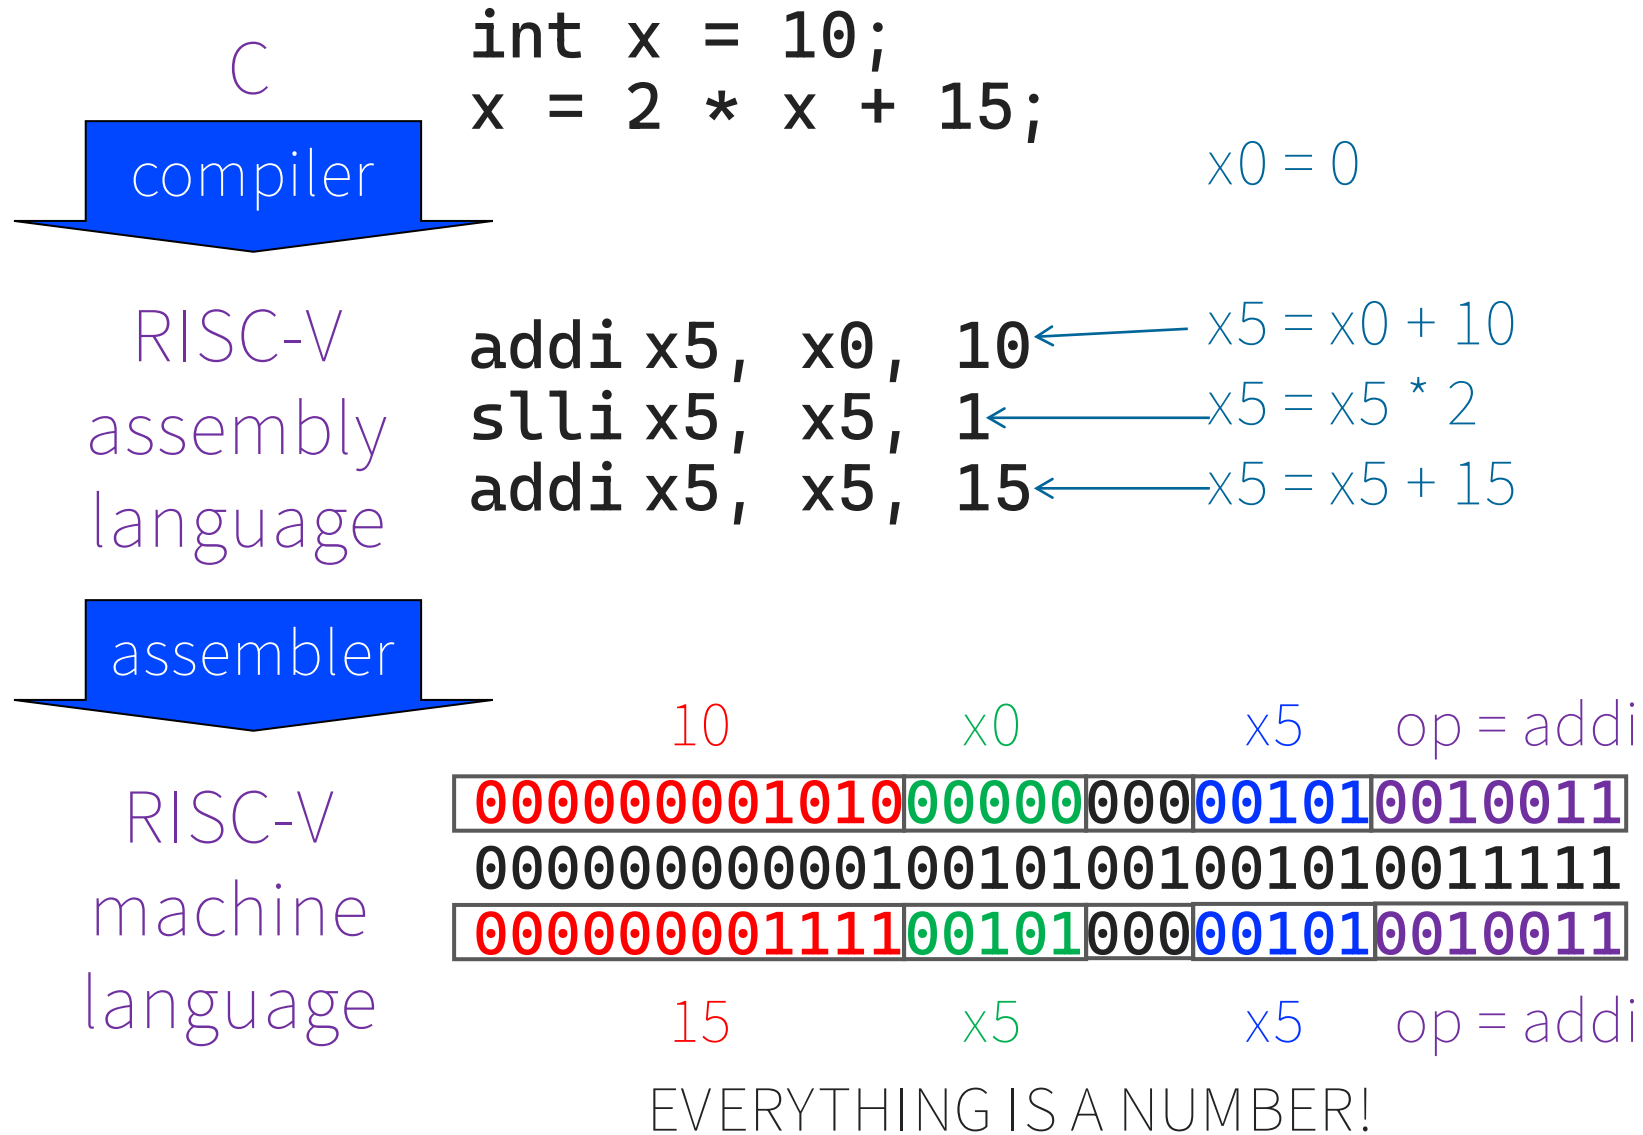

Big Picture: How to Design Program a Processor

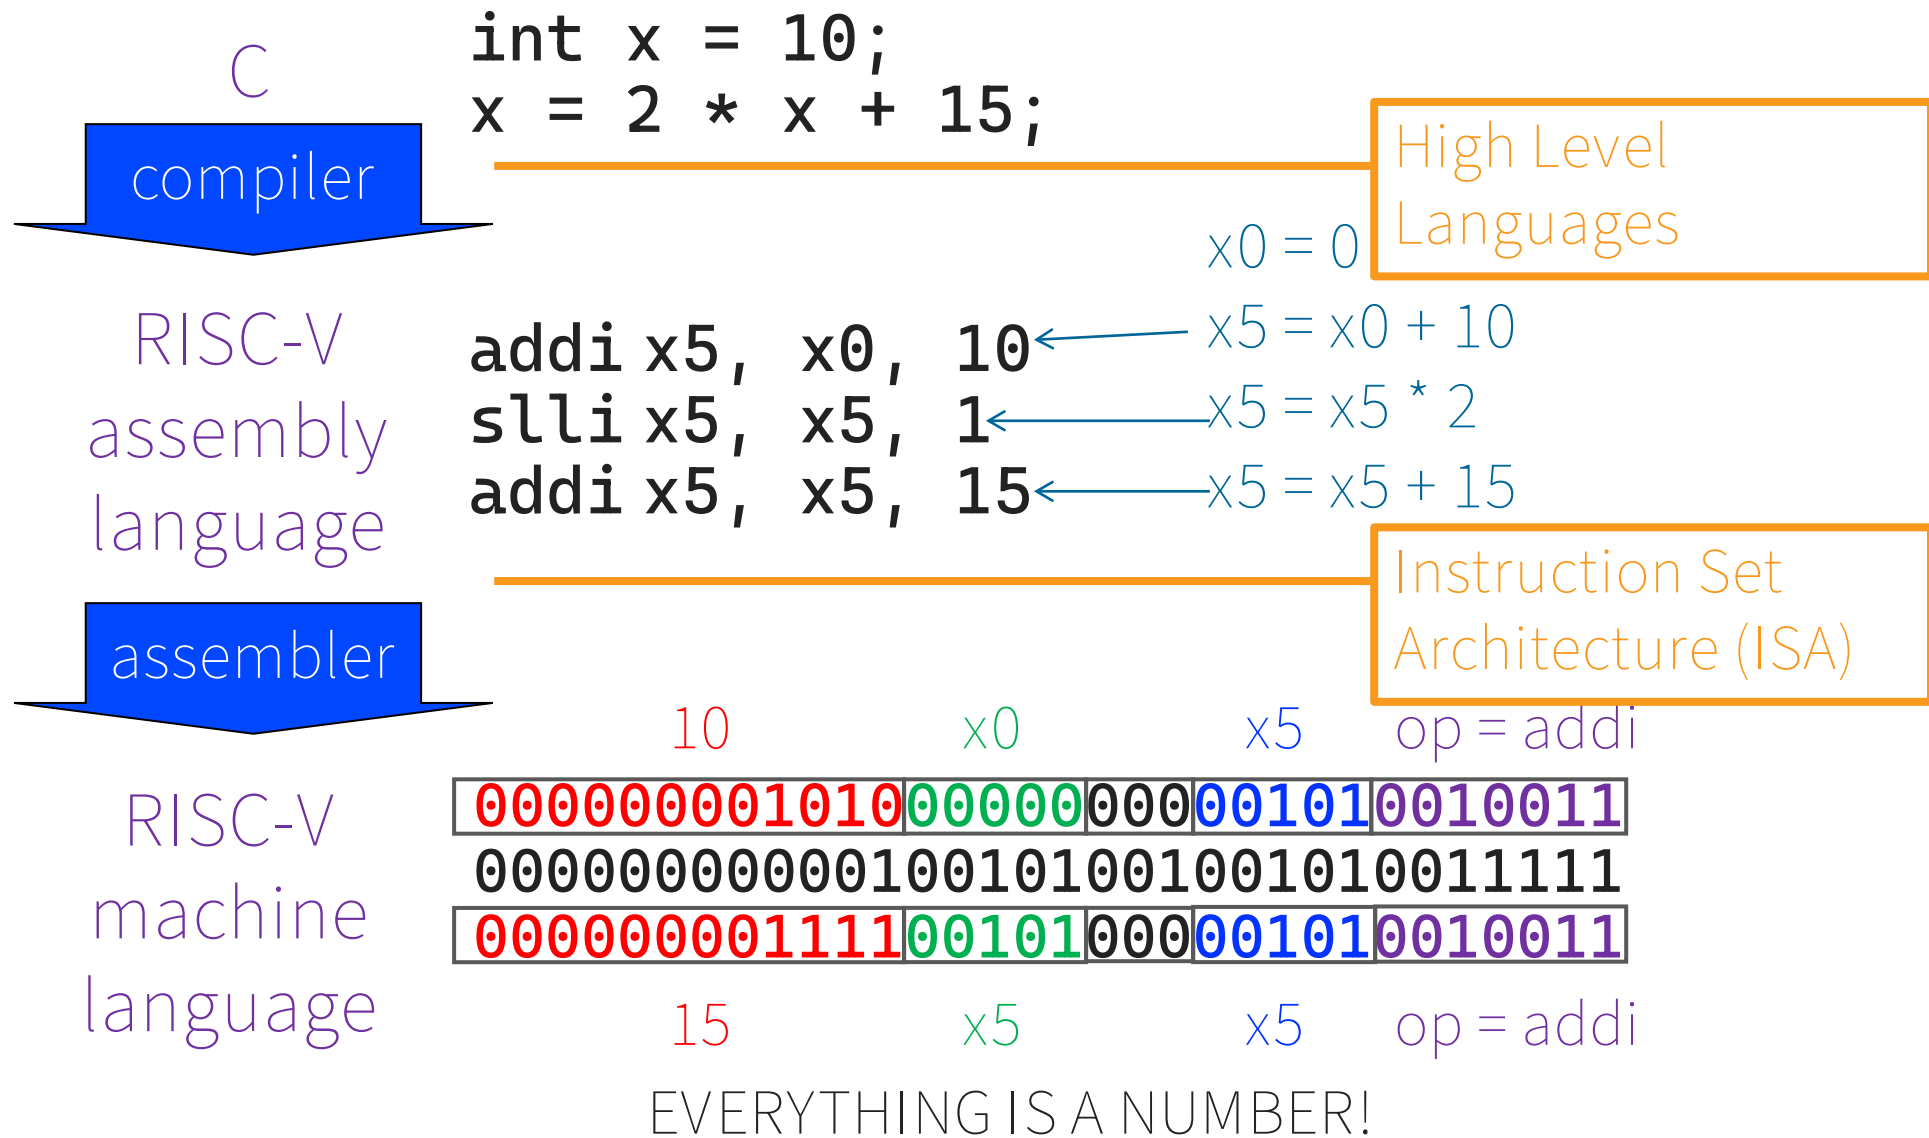

Goals for Today

Instruction Set Architectures

- ISA Variations, and CISC vs RISC
- Peek inside some other ISAs:
 - X86
 - ARM



Iron Law of Processor Performance

How to make *a processor* that runs *programs faster*?

$$\frac{\textit{time}}{\textit{program}} = \frac{\textit{instructions}}{\textit{program}} * \frac{\textit{cycles}}{\textit{instruction}} * \frac{\textit{time}}{\textit{cycle}}$$

(CPI) **Clock Frequency**

Pipelining/Performance Lecture: tradeoff CPI and clock frequency

This lecture: incorporating *instruction count* into the equation



Instruction Set Architecture (ISA)

Different CPU architectures specify different instructions

Two classes of ISAs

- Reduced Instruction Set Computers (RISC)
RISC-V, MIPS, IBM Power PC, Sun Sparc, Alpha
- Complex Instruction Set Computers (CISC)
Intel x86, PDP-11, VAX
- Another ISA classification: Load/Store Architecture
 - Data must be in registers to be operated on
For example: $\text{array}[x] = \text{array}[y] + \text{array}[z]$
1 add ? OR 2 loads, an add, and a store ?
 - Keeps HW simple → many RISC ISAs are load/store



ISA Variations

ISA defines the permissible instructions


- **RISC-V/MIPS**: load/store, arithmetic, control flow, ...
- **ARMv7**: similar to MIPS, but more shift, memory, & conditional ops
- **ARMv8 (64-bit)**: even closer to MIPS, no conditional ops
- **VAX**: arithmetic on memory or registers, strings, polynomial evaluation, stacks/queues, ...
- **Cray**: vector operations, ...
- **x86**: a little of everything




Brief Historical Perspective on ISAs

Accumulators

- Early computers had one register!

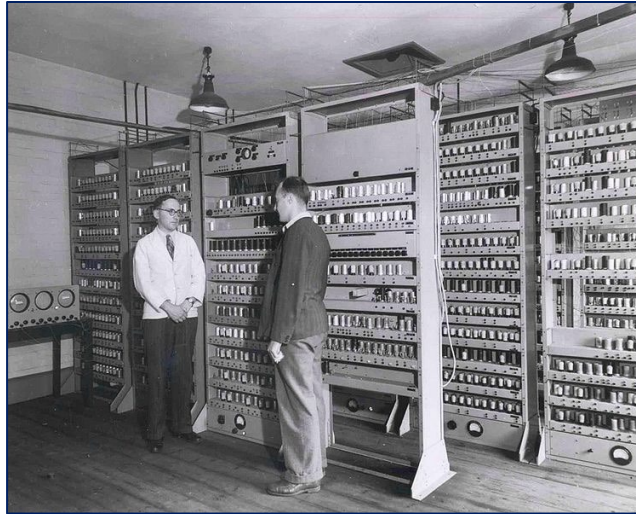

EDSAC (Electronic Delay Storage Automatic Calculator) in 1949

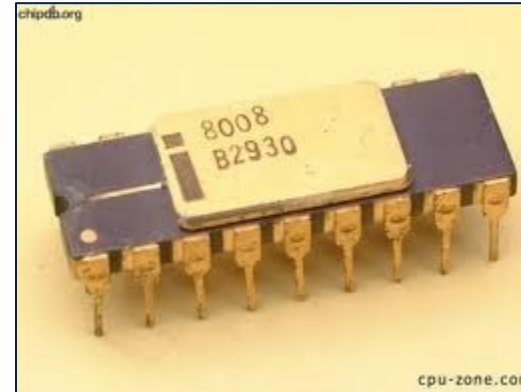

Intel 8008 in 1972

- Two registers short of a MIPS instruction!
- Requires memory-based addressing mode
 - Example: `add 200 // ACC = ACC + Mem[200]`
 - Add the accumulator to the word in memory at address 200
 - Place the sum back in the accumulator

Brief Historical Perspective on ISAs

Next step: More Registers

- Dedicated registers
 - separate accumulators for mult/div instructions
- General-purpose registers
 - Registers can be used for any purpose
 - RISC-V, MIPS, ARM, x86
- *Register-memory* architectures
 - One operand may be in memory (e.g. accumulators)
 - x86 (i.e. 80386 processors)
- *Register-register* architectures (aka load-store)
 - All operands must be in registers



ISAs are a product of current technology

- # of available registers plays huge role in ISA design

Machine	# General Purpose Registers	Architectural Style	Year
EDSAC	1	Accumulator	1949
IBM 701	1	Accumulator	1953
CDC 6600	8	Load-Store	1963
IBM 360	18	Register-Memory	1964
DEC PDP-8	1	Accumulator	1965
DEC PDP-11	8	Register-Memory	1970
Intel 8008	1	Accumulator	1972
Motorola 6800	2	Accumulator	1974
DEC VAX	16	Register-Memory, Memory-Memory	1977
Intel 8086	1	Extended Accumulator	1978
Motorola 6800	16	Register-Memory	1980
Intel 80386	8	Register-Memory	1985
ARM	16	Load-Store	1985
MIPS	32	Load-Store	1985
HP PA-RISC	32	Load-Store	1986
SPARC	32	Load-Store	1987
PowerPC	32	Load-Store	1992
DEC Alpha	32	Load-Store	1992
HP/Intel IA-64	128	Load-Store	2001
AMD64 (EMT64)	16	Register-Memory	2003



In the Beginning...

People programmed in assembly and machine code!

- Needed as many addressing modes as possible
- Memory was (and still is) slow

CPUs had relatively few registers

- Register's were more “expensive” than external mem
- Large number of registers requires many bits to index

Memories were small

- Encouraged highly encoded microcodes as instructions
- Variable length instructions, load/store, conditions, etc



Takeaway

The number of available registers greatly influenced the instruction set architecture (ISA)

Complex Instruction Set Computers necessary but were very complex

- Necessary to reduce the number of instructions required to fit a program into memory.
- However, also greatly increased the complexity of the ISA as well.

Next Goal

How do we reduce the complexity of the ISA while maintaining or increasing performance?



Reduced Instruction Set Computer (RISC)

John Cock

- IBM 801, 1980 (started in 1975)
 - Name 801 came from the building that housed the project
- Idea: Can make a very small and very fast core
- Known as “the father of RISC Architecture”
- Turing Award and National Medal of Science



Reduced Instruction Set Computer (RISC)


Dave Patterson

- RISC Project, 1982
- UC Berkeley
- RISC-I: ½ transistors & 3x faster
- Influences: Sun SPARC, namesake of industry



John L. Hennessy

- MIPS, 1981
- Stanford
- Simple, *full* pipeline
- Influences: MIPS computer system, PlayStation, Nintendo

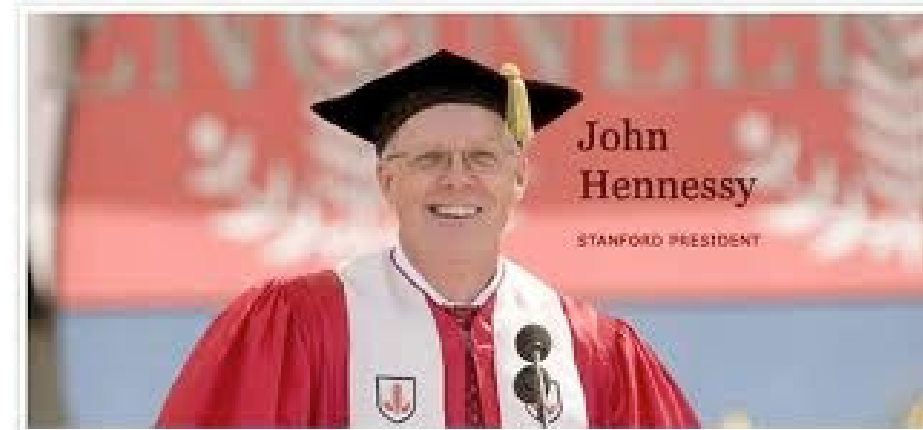

RISC vs. CISC

RISC-V = Reduced Instruction Set Computer (RISC)

- \approx 200 instructions, 32 bits each, 4 formats
- all operands in registers
 - almost all are 32 bits each
- \approx 1 addressing mode: Mem[reg + imm]

x86 = Complex Instruction Set Computer (CISC)

- $>$ 1000 insns, 1-15 bytes each (*dozens of add insns*)
- operands in dedicated registers, general purpose registers, memory, on stack, ...
 - can be 1, 2, 4, 8 bytes, signed or unsigned
- 10s of addressing modes
 - e.g. Mem[segment + reg + reg*scale + offset]



The RISC Tenets

RISC

- Single-cycle execution
- Hardwired control
- Load/store architecture
- Few memory addressing modes
- Fixed-length insn format
- Reliance on compiler optimizations
- Many registers (compilers are better at using them)

CISC

- many multicycle operations
- microcoded multi-cycle operations
- register-mem and mem-mem
- many modes
- many formats and lengths
- hand assemble to get good performance
- few registers



RISC vs CISC

RISC Philosophy

Regularity & simplicity
Leaner means faster
Optimize common case

Energy efficiency
Embedded Systems
Phones/Tablets

CISC Rebuttal

Compilers can be smart
Transistors are plentiful
Legacy is important
Code size counts
Micro-code!
“RISC Inside”

Desktops/Servers



ARM Droid vs WinTel

Android OS on ARM processor



Windows OS on Intel (x86) processor



ARM Droid vs WinTel vs MacBook

Android OS on ARM processor



Windows OS on Intel (x86) processor



Mac OS X on M* processor



Takeaway

The number of available registers greatly influenced the instruction set architecture (ISA)

Complex Instruction Set Computers were very complex

- Necessary to reduce the number of instructions required to fit a program into memory.
- However, also greatly increased the complexity of the ISA as well.

Back in the day... CISC was necessary because everybody programmed in assembly and machine code! Today, CISC ISA's are still dominant due to the prevalence of x86 ISA processors. However, RISC ISA's today such as ARM have an ever increasing market share (of our everyday life!).

ARM borrows a bit from both RISC and CISC.

Next Goal

How does RISC-V and ARM compare to each other?



RISC-V instructions

32 bits long and 4 possible formats:

R-type

funct7	rs2	rs1	funct3	rd	op
7 bits	5 bits	5 bits	3 bits	5 bits	7 bits

I-type

imm	rs1	funct3	rd	op
12 bits	5 bits	3 bits	5 bits	7 bits

S-type

imm	rs2	rs1	funct3	imm	op
7 bits	5 bits	5 bits	3 bits	5 bits	7 bits

U-type


imm	rd	op
20 bits	5 bits	7 bits




ARMv7 instruction formats

All ARMv7 instructions are 32 bits long, 3 formats

R-type

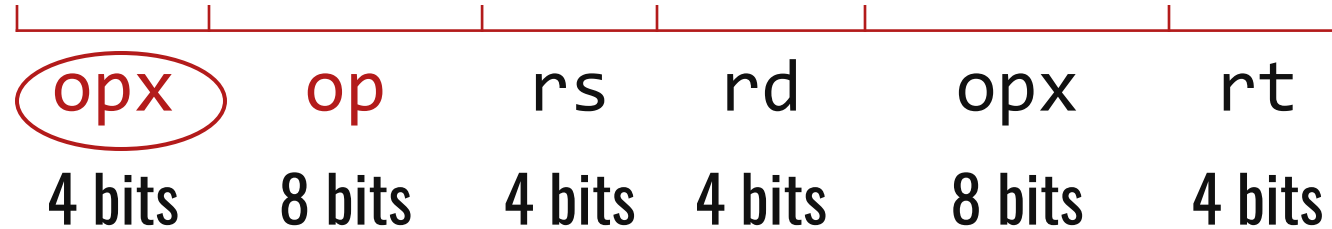

I-type

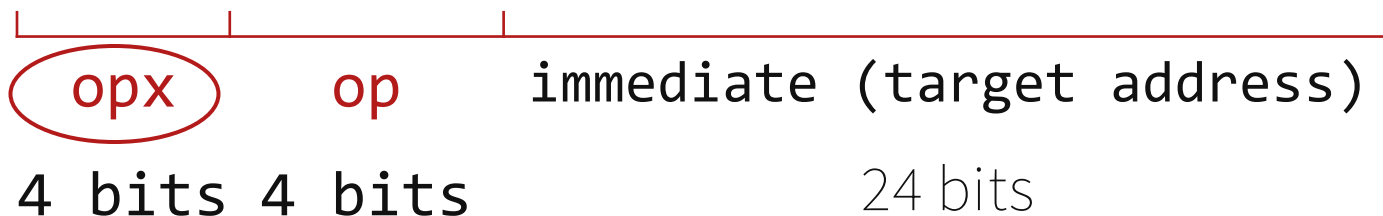

ARMv7 Conditional Instructions

```
while(i != j) {  
    if (i > j)  
        i -= j;  
    else  
        j -= i;  
}
```

Loop: **CMP** Ri, Rj

0101

SUBGT Ri, Ri, Rj

0001 != 0

SUBLE Rj, Rj, Ri


1010 != 0000

BNE loop

then loop

ARM: avoids delays with conditional instructions

New: 1-bit condition registers (CR)

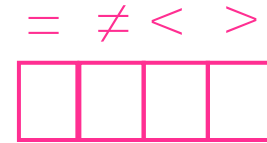

// set condition registers

// Example: 4, 3 → CR =

// 5,5 → CR = 1000

// i = i-j only if CR &

// j = j-i only if CR &

// if "NE" (not equal),

Control Independence!

ARMv7: Other Cool operations

Shift one register (e.g., R_c) any amount

Add to another register (e.g., R_b)

Store result in a different register (e.g. R_a)

ADD R_a, R_b, R_c LSL #4

R_a = R_b + R_c << 4

R_a = R_b + R_c x 16



ARMv7 Instruction Set Architecture

ARMv7 instructions are 32 bits long, 3 formats

Reduced Instruction Set Computer (RISC) properties

- Only Load/Store instructions access memory
- Instructions operate on operands in processor registers
- 16 registers

Complex Instruction Set Computer (CISC) properties

- Autoincrement, autodecrement, PC-relative addressing
- Conditional execution
- Multiple words can be accessed from memory with a single instruction (SIMD: single instr multiple data)



ARMv8 (64-bit) Instruction Set Architecture

ARMv8 instructions are 64 bits long, 3 formats

Reduced Instruction Set Computer (RISC) properties

- Only Load/Store instructions access memory
- Instructions operate on operands in processor registers
- 32 registers and r0 is always 0

~~Complex Instruction Set Computer (CISC) properties~~

- ~~• Conditional execution~~
- ~~• Multiple words can be accessed from memory with a single instruction (SIMD: single instr multiple data)~~

ISA Takeaways

The number of available registers greatly influenced the instruction set architecture (ISA)

Complex Instruction Set Computers were very complex

+ Small # of insns necessary to fit program into memory.

- greatly increased the complexity of the ISA as well.

Back in the day... CISC was necessary because everybody programmed in assembly and machine code! Today, CISC ISA's are still dominant due to the prevalence of x86 ISA processors. However, RISC ISA's today such as ARM have an ever increasing market share (of our everyday life!).

ARM borrows a bit from both RISC and CISC.